

475 King's Highway, Lynnwood P.O.Box 36675, Menlo Park Pretoria, South Africa 0102

(t) +27 12 348 7301 (f) +27 12 348 1129 (e) techsupport@softconserv.com www.softconserv.com

Set-up of ZK Enrollment Reader in Softwin3 Software.

Version 0. 1

Prepared by: Shaun Laas

Softcon Software Control Services (Pty) Ltd.

7 March 2017

Revision History

Name	Date	Reason For Changes	Version
SL	26-Jan- 2016	Initial document	0.1
SL	26-Jan- 2016	Cover Page	0.2

Contents

- 1) Information
- 2) Instructions

Information

In this document we will show you how to set-up the ZK Enrollment reader in Softwin3.


Instructions

Step 1:

Connect the ZK Enrolment reader via usb to the computer.


Step 2:

Click on Setup → Setup Editor → Fp Reader Setup to open the following screen.

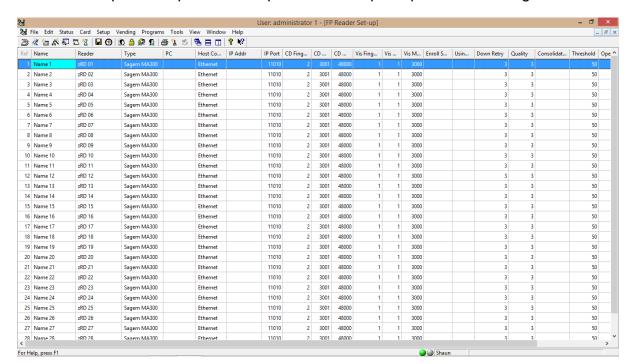


Step 3:

On a separate xref, give the enrolment reader a name.

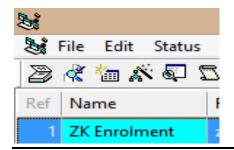

Step 4

At the type column, open the drop-down menu and select the ZK Enrol option.

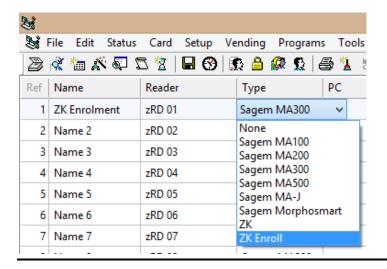


Step 5

At the pc column, specify the pc that the ZK Enrolment reader is connected to.




Step 6 (Optional)

 This step is not required, remove the tick from the 2FP Acquisition and place a tick at the Consolidate column. This will enable 3 templates per finger to increase template quality.




Step 7

Click on Setup \rightarrow Setup Editor \rightarrow FP App to open up the following screen.

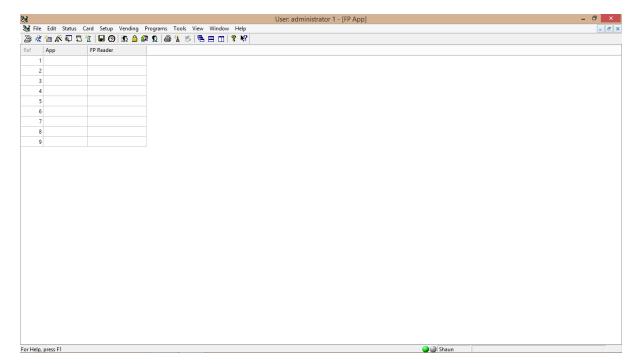


Step 8

At the App column open the drop-down menu and select SCS_Client.

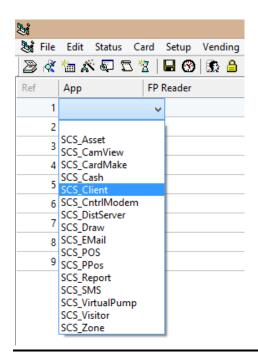

Step 9

At the FP Reader column open the drop-down menu and select the ZK enrol reader.

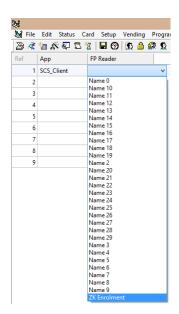

After completing the steps above, the ZK Enrolment reader will allow you to enrol finger templates.